

VM-2500  
Console Connector  
Pin Codes

VM2500 J1		VM2500 J2	
Pin	Description	Pin	Description
C	ROW 1	17	ROW 17
D	ROW 2	18	ROW 18
E	ROW 3	19	ROW 19
F	ROW 4	20	ROW 20
G	ROW 5	21	ROW 21
H	ROW 6	22	ROW 22
J	ROW 7	23	ROW 23
K	ROW 8	24	ROW 24
L	ROW 9	25	ROW 25
M	ROW 10	26	ROW 26
N	ROW 11	27	ROW 27
P	ROW 12	28	ROW 28
R	ROW 13	29	ROW 29
S	ROW 14	30	ROW 30
T	ROW 15	31	ROW 31
U	ROW 16	32	ROW 32
		33	ROW 33
ee	HPR LVL 1	34	ROW 34
		35	ROW 35
A	RS-485 A	36	ROW 36
B	RS-485 B		
aa	PGM LINE OUT 1	37	SENSOR +8V RIGHT
bb	PGM LINE OUT 2	38	SENSOR GND RIGHT
1	+12_SW NGPS SENSOR		
2	GND NGPS SENSOR	5	HPR LVL 2
		6	HOPPER PRESS 1
gg	RELUCTANCE 1	7	HOPPER PRESS 2
dd	RELUCTANCE 2	8	GND HOPPER
ff	DIGITAL 1	39	LIFT SW 1
V	+12V_SW RADAR	40	LIFT SW 2
W	GND RADAR		
		45	DIGITAL 2
hh	SENSOR +8V LEFT	46	+12V_SW AUX
cc	SENSOR GND LEFT	47	GND AUX
3	+12V IN	11	RS-232 TXD
4	PWR GND	12	RS-232 RXD
		13	RS-232 DTR
		14	RS-232 DSR
		15	RS-232 GND